



TESTNET User Guide

To test socket – Plug into socket using normal cable.

To test PC card – Plug into socket using crossover cable.

Once connected press the TEST button.

- If Link LED comes on then service is OK.
- 10 or 100 Mb/s LED will indicate speed.
- RX LED may flash intermittently to show packets from the hub.
- FDX LED will light if full duplex service.

- If only 10 Mb/s LED is lit then service is not present.
- If Battery Low LED comes on when TEST button is pressed, replace battery. (Uses PP3 Battery)